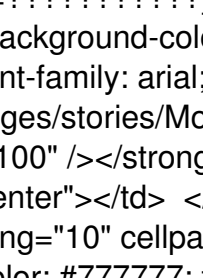
 **BF1E1** **1 PRI / ISDN module** **Gateways** **berofix.** **BF1E1 module** **NT** **TE** **Pin-Out** **PINS 1,2,4,5.** **NT-mode** **cross**, **(BFE1Cross).** **(120 omhs)** **DIP** **module.**

 **BF1E1 850x566**

1 PRI (S2M) Port	configurable as NT or TE	Termination Resistors 120 ohm switchable via DIPs	Layer 2 is Q.921 and Layer 3 is Q.931 (EuroISDN DSS1) compatible	DSS1 Feature set: CLIP/No-Screening, CLIR, COLP, UUS, MCID, CD, CNIP	Q.SIG feature set: CNIP	105 x 46 x 9 mm	< 40g	Operating Temperature: 0-70°C	CE and TBR-4 compliance (ISDN PRI)
-------------------------	---------------------------------	--	---	---	--------------------------------	------------------------	-----------------	--------------------------------------	---

[Datasheet](#)

```
moduls</a></span></span></td> </tr> </table> <p>{tab= Accessories}</p> <table
border="0" cellspacing="10" cellpadding="0" style="width: 615px; background-color: #ffffff;">
<tr> <td> <p style="font-family: arial; font-size: 12px;"><strong>Accessories</strong></p> <ul
style="font-family: arial, helvetica, sans-serif; font-size: 10pt; color: #777777;"> <li
style="padding-top: 0px; padding-right: 0px; padding-bottom: 0px; border-style: initial;
border-color: initial; margin-top: 0px; margin-right: 0px; margin-bottom: 0px; border-width:
0px;">BFBridge (to use all 4 RJ45 slots on a Baseboard with one
bf4S0,bf4FXS,bf4FXO,bf2S02FXS)</li> <li style="padding-top: 0px; padding-right: 0px;
padding-bottom: 0px; border-style: initial; border-color: initial; border-width: 0px; margin:
0px;">BFTAdapters (to connect 2 BRI or analog Lines on one RJ45 of the berofix)</li> <li
style="padding-top: 0px; padding-right: 0px; padding-bottom: 0px; border-style: initial;
border-color: initial; border-width: 0px; margin: 0px;">BFPCM (PCM Cable to interconnect
berofix Baseboards)</li> <li style="padding-top: 0px; padding-right: 0px; padding-bottom: 0px;
border-style: initial; border-color: initial; border-width: 0px; margin: 0px;">BFE1Cross, (1.8m
E1/T1 "cross-over" cable)</li> <li style="padding-top: 0px; padding-right: 0px; padding-bottom:
0px; border-style: initial; border-color: initial; border-width: 0px; margin: 0px;">BF19bracket (19
inch rack mount bracket for berofix Boxes)</li> <li style="padding-top: 0px; padding-right: 0px;
padding-bottom: 0px; border-style: initial; border-color: initial; border-width: 0px; margin:
0px;">BFANTS (small 7 cm stock antenna for BF2GSM modules)</li> <li style="padding-top:
0px; padding-right: 0px; padding-bottom: 0px; border-style: initial; border-color: initial;
border-width: 0px; margin: 0px;">BFANTL (2m cable antenna with magnetic foot for BF2GSM
modules)</li> <li style="padding-top: 0px; padding-right: 0px; padding-bottom: 0px;
border-style: initial; border-color: initial; border-width: 0px; margin: 0px;">BFFXXCable (RJ45 to
RJ11 cable to use with berofix analog modules)</li> </ul> </td> </tr> </table>
<p>{/tabs}</p>
```