

<p>{tab=???????? ??????????????}</p> <table style="width: 615px; background-color: #ffffff;" border="0" cellspacing="10" cellpadding="0"> <tr> <td valign="top"> <p style="font-family: arial; font-size: 12px;"></p> </td> <td> <p>?? module BF4S0 ????? ???? 4 ????? BRI/ISDN module ??? ?? Gateways ??? ??? ?????? berofix.</p> <div style="text-align: left;"> <p style="font-family: Arial, Verdana, 'Helvetica san-serif'; font-size: 10pt; line-height: 21px; color: #777777;">???? ????? ???? BF4S0 ?????? ?? ?????????? ?????????? ?? NT (????????????? ???? ??????????) ? TE (????????????? ?????????????) ??????????????. ??? ????? ???? ??????????????, ????? ????? ?????? ???? ?????????????? ?? Point-to-Multi-Point (PMP) ? Point-to-Point (PTP) ??????????????. ? ?????????? ???? ?????????????? ?? / ?? ??? ? ?????????????????? ??? ?????????????? ?????????????? ?????????? ?????????? ?? ?????????????? (jumper free) ?? ?????? ?????????? ??? ?????????????? ?????????????? jumper ??????????.</p> </div> </td> </tr> </table>

<p>{tab=????????????}</p> <table style="width: 615px; background-color: #ffffff;" border="0" cellspacing="10" cellpadding="0"> <tr> <td style="width: 150px;" align="center"> <p style="font-family: arial; font-size: 12px;"></p> </td> <td align="center"></td> <td align="center"></td> </tr> </table> <p>
</p> <p>{tab=????????????}</p> <table style="width: 615px; background-color: #ffffff;" border="0" cellspacing="10" cellpadding="0"> <tr> <td style="font-family: Arial, Helvetica, sans-serif; font-size: 10pt;"> <p style="font-family: arial; font-size: 12px;">?????????????</p> <li style="font-family: arial; font-size: 12px;">4 BRI (S0) ISDN Ports <li style="font-family: arial; font-size: 12px;">Each Port configurable as NT or TE with PIN interchanging <li style="font-family: arial; font-size: 12px;">Termination Resistors (100 ohm) per line <li style="font-family: arial; font-size: 12px;">TE/NT mode and Termination is selectable via software (Jumperfree) <li style="font-family: arial; font-size: 12px;">Layer 2 is Q.921 and Layer 3 is Q.931 (EuroISDN DSS1) compatible <li style="font-family: arial; font-size: 12px;">DSS1 Feature set: CLIP/No-Screening, CLIR, COLP, UUS, MCID, CD, CNIP <li style="font-family: arial; font-size: 12px;">Q.SIG feature set: CNIP <li style="font-family: arial; font-size: 12px;">????????????: 105 x 46 x 9 mm <li style="font-family: arial; font-size: 12px;">?????: < 40g <li style="font-family: arial; font-size: 12px;">Operating Temperature: 0-70°C

<li style="font-family: arial; font-size: 12px;">CE and TBR-3 compliance (ISDN BRI) ? Datasheet moduls</td>
</tr> </table> <p>{tab= Accessories}</p> <table style="width: 615px; background-color: #ffffff;" border="0" cellspacing="10" cellpadding="0"> <tr> <td> <p style="font-family: arial; font-size: 12px;">Accessories</p> <li style="font-family: arial; font-size: 12px;">BFBridge (to use all 4 RJ45 slots on a Baseboard with one bf4S0,bf4FXS,bf4FXO,bf2S02FXS) <li style="font-family: arial; font-size: 12px;">BFTAdapters (to connect 2 BRI or analog Lines on one RJ45 of the berofix) <li style="font-family: arial; font-size: 12px;">BFPCM (PCM Cable to interconnect berofix Baseboards) <li style="font-family: arial; font-size: 12px;">BFE1Cross, (1.8m E1/T1 "cross-over" cable) <li style="font-family: arial; font-size: 12px;">BF19bracket (19 inch rack mount bracket for berofix Boxes) <li style="font-family: arial; font-size: 12px;">BFANTS (small 7 cm stock antenna for BF2GSM modules) <li style="font-family: arial; font-size: 12px;">BFANTL (2m cable antenna with magnetic foot for BF2GSM modules) <li style="font-family: arial; font-size: 12px;">BFFXXCable (RJ45 to RJ11 cable to use with berofix analog modules) </td> </tr>
</table> <p>{/tabs}</p>